

DE VIELLE[®]

Contemporary Gas Heater

INSTRUCTION MANUAL

Models: DEF978265



PLEASE RETAIN THIS MANUAL FOR FUTURE REFERENCE

Although every precaution has been taken to eliminate sharp edges always take care when handling metal components.

SAFETY INSTRUCTIONS

Do not: Attempt to use the heater in high rise flats, basements, bathrooms or bedrooms.

Do not: Use any other gas except Butane or Propane.

Do not: Attempt to clean the heater until it is turned off and fully cooled.

Do not: Use naked flame to detect suspected gas leaks.

Do not: Allow children or pets to play near the heater.

Do not: Twist the flexible gas hose.

Do not: Touch the glass panel or front and sides of the unit while the heater is operating.

Warning:

Never attempt to light the unit if the hose is loose or damaged in any way. Also never attempt to light the unit if you have reason to believe that the unit may be leaking gas. In the event of a gas leak turn off the gas supply at the cylinder and have the unit fully checked by a competent person in accordance with the instructions enclosed. We recommend servicing once a year. Should you need to change the gas bottle, confirm that the gas supply is turned off at the cylinder and that there are no sources of ignition near before proceeding.

Do: Place heater on a flat, level and solid surface at all times.

Do: Leak test the unit after long periods of storage.

Do: Wait for 3 minutes before relighting, if the burner flame becomes extinguished during use.

Do: Ensure that all naked flames are extinguished before fitting a new cylinder.

Do: Store gas cylinders outdoor, above ground level in a safe and secure environment.

Do: Make sure that the gas supply at the gas cylinder is turned off after use.

Do: Ensure that servicing of the unit is carried out by a competent person in accordance with the instructions enclosed.

Do: Allow the unit to cool down for one hour before touching the front or sides.

Always: Follow any safety instructions supplied with gas cylinders.

Always: Keep unit well away from glass doors and windows to ensure no possibility of heat build up and damage.

Always: We recommend servicing once a year or after a prolonged period of non-use.

Always: Ensure that there is no blockage of airflow. For example sooting and poor burning can be caused by dirt, insects, cobwebs, blocking the airflow to/in the burner.

Cleaning: Abrasive cleaners are not to be used. Clean unit with a damp cloth when fully cooled.
This unit is designed for use with a 7kg or 15kg (UK) and 13kg cylinder (Eire)

ASSEMBLY INSTRUCTIONS - IN 3 EASY STEPS

If you require any further assistance please do not hesitate to contact us directly on our helpline: 00 353 1 823 9200



Remove the glass panel and place the coals in position as shown above.



Fit Glass Panel in place as shown. Secure in position with fixings as shown.



Fit back door onto the brackets as indicated above.

NOTE:

Door can be adjusted to fit either a big or small gas cylinder.

NOTE:

When fitting gas regulator to the cylinder ensure that the regulator is in the off position.

To fit battery unscrew ignition button and place battery in housing. Refit ignition button securely.

USER INSTRUCTIONS

Read these instructions before using the appliance.

When lighting for the first time, burn outdoors for 4 hours minimum to cure the synthetic coals.

(The coals give off an odour when curing.)

The appliance must be installed and used in accordance with the regulations, which are currently in force.

The heater should be positioned on a level surface. Only use in a well ventilated area.

The minimum room size when using this appliance is 64 cubic metres with a minimum ventilation of 80 cm squared area.

To fit a Butane Gas Regulator:

Attach regulator to end of hose and secure with hose clip.

Note: for ease of fitting hose, lubricate ribbed nipple of regulator with a soap solution.

To fit a Butane Gas Cylinder:

(Ensure that the area is free from any unprotected combustible material or substance)

1. The changing and connection of LPG cylinders must be undertaken in a flame free atmosphere
2. Attach the regulator to the new cylinder. Ensure that the hose is not twisted or damaged in any way.
3. Use gas cylinders with a gas capacity of 7-15kgs.
4. In order to remove the regulator you must ensure that the regulator is in the "off" position.

Before lighting:

1. Inspect the hose assembly. If the hose is cut or shows signs of excessive wear, or is leaking it must be replaced prior to operation of the heater
2. Ensure the heater is positioned with a minimum clearance above and beside of 0.6metres from flammable materials both vertically and horizontally.
3. Ensure that the glass panel is closed securely.

To Light Heater:

1. Fit battery type AA provided into ignition button. See Fig.1
2. Turn on heater at gas cylinder regulator
3. Turn the control knob to the position 🔥 and hold down for 5 seconds to ensure all air in the hose is expelled.
4. Push control dial down and turn 🔥🔥 to flame position and at the same time press the sparker button to light the pilot. If there is no spark check the battery type AA is correctly fitted. (the pilot flame can be viewed at the right hand side of the coal bed)
5. If pilot does not light turn control dial to off position. Wait one minute and repeat step 3.
Do not continuously hold down the control knob as you may cause a build up of gas.
6. Once the pilot is lit hold down the control dial for at least 10 seconds until the main burner lights. Operate the fire between the 🔥🔥 high and 🔥 low flame settings as required.
7. If the pilot and main burner do not stay lit on releasing the control knob, turn the control knob to the ignition position and repeat steps 3 to 4.
8. The 🔥 is a pilot setting only.

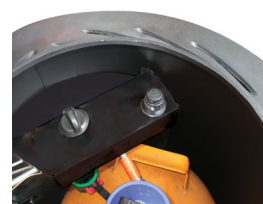


Fig.1
Unscrew ignition button to fit battery 1.5V type AA

To Turn Off Heater:

1. Turn the control knob to 🔥 position.
2. Turn off the gas at the cylinder regulator valve.

NOTE: The pilot light will remain alight until the cylinder regulator is turned off.

3. Disconnect the regulator from the cylinder when the heater is not in use.

Important: Read all the instruction Manual before using this appliance . This appliance must be installed in accordance with such regulations as are in force. Installation to be carried out by a competent person.

Warning:

Do not use in leisure vehicles such as caravans and auto caravans.

In the event of a gas leak. ie. If you smell gas, turn off the cylinder valve. Disconnect the cylinder, take it outdoors and contact a competent service technician.

Do not position the appliance close to walls, furniture, hangings, net curtains, bed linen and other inflammable materials as this would result in the risk of fire. The guard (glass door) on this appliance is to prevent risk of fire or injury from burns and no part of it should be permanently removed. **IT DOES NOT GIVE FULL PROTECTION FOR YOUNG CHILDREN OR THE INFIRM.** For the full protection of young children or the infirm, we recommend a fireguard conforming to BS 8423 be fitted.

TECHNICAL & SERVICING INFORMATION

This appliance is designed for indoor use only using Butane gas at a supply pressure of 28-30 millibar and must be serviced by a fully qualified and competent registered engineer in accordance with the instructions included. Please read all accompanying documentation carefully.

Technical Specifications:

Overall height:	670 millimetres approximately
Overall width:	375 millimetres approximately
Heat input:	3.0kW (Gross)
Gas consumption:	215 grams per hour at maximum setting
Gas category:	I3+
Gas type & Supply pressure:	Butane 28-30 mbar and Propane 37 mbar
Injector size:	0.83 mm
Regulator type:	28 mbar
Regulator Outlet pressure:	28 mbar
Cylinder sizes:	11.4kg cylinder (Eire) and 15kg or 7kg cylinder (U.K)
Hose	BS3212 length 40 cm
Destination Countries GB & IE	

CE 0086

The product is fully guaranteed for two years regarding proper use.
This guarantee does not affect your statutory rights. For servicing contact your local gas supplier. Servicing to be carried out by a qualified and competent registered engineer every 1000 hours of use.

Parts List



Stove Back Door

Glass Panel

Synthetic Coals

Flexible Gas
Hose & Regulator

HOW TO ORDER

Parts orders may be placed by contacting us directly at:
00353 1 823 9200

by post at:

MCL, Unit 5,
Northern Cross Business Park,
North Road, Finglas, Dublin 11, Ireland
Or by emailing us at
info@mcl.ie

Please include the following details:

- Model Name
- Serial Number
- Kilowatt Rating
- Month and Year of Purchase
- Name and Location of Retailer
- Your Name, Address and Contact Number

For help on this product and our range of products see our website www.mcl.ie or contact us direct on our Helpline 00353 1 823 9200
Helpline hours are 9am to 5pm Monday to Friday.

GUARANTEE

This flueless gas stove is made to an exacting quality standard and is covered by the following guarantee.
The product is fully guaranteed for 2 years, regarding proper use. THIS GUARANTEE DOES NOT AFFECT YOUR STATUTORY RIGHTS IN ANY WAY



The crossed out wheelie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for re-cycling.



www.devielle.ie